


# ARIES LIMITED

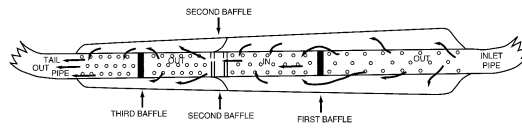


MANUFACTURER OF THE ONLY AUTHENTIC MODEL "A" MUFFLERS SINCE 1983

Phone: (650) 279-6609

## Tailpipe, Clamps and Brackets for the Model "A" Station Wagon

In 1931 the Ford Service Bulletin suggested the Installation of an extended tail pipe on all station wagons in to avoid fumes in the rear seats.

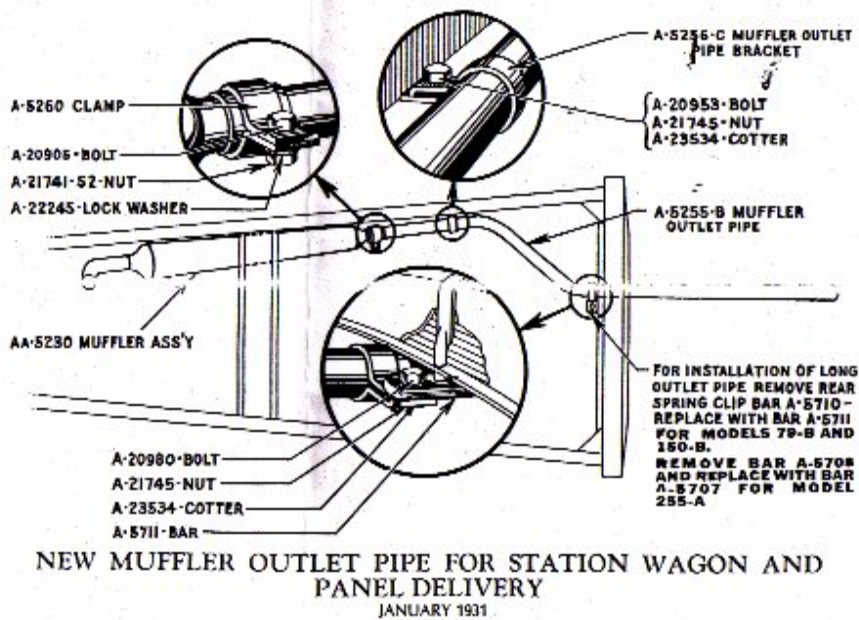

Items in **AA-5255-B** Kit

- 1 - Threaded rod with four nuts-this replaces bolt **A-20980** as we have found the pipe must be lowered, as it is too close to the wood in the body.
- 1 - Long tail pipe clamp bolt (**A-20953**) with nut for use at the frame hole
- 1 - A5711-R Special rear spring clamping bar
- 1- Large clamp for connection to rear of muffler (**A5260-R**) which we have replaced with a modern style "U" Clamp, as the original design did not seal effectively.
- 2 - Standard tail pipe clamps (**A5256-C**)-One for use at the frame and one for use at the spring clamp using the threaded rod.
- 1 - Pipe extension for rear of muffler (**AA5230**)
- 1- Instruction Sheet

We also sell a special muffler ready to accept the tail pipe:

**Part AA-5230-BS - black painted**

**Part AA-5230-SS - stainless steel**